

Head Maintenance

Areas to clean around the head :

1. When the product is turned on, press the maintenance button on the control panel. You see the Maintenance menu.
2. Press the up or down arrow button on the control panel to select **Head Maintenance** and press the **OK** button.
3. Press the up or down arrow button to select **Regular Cleaning** and press the **OK** button.
4. Press the **OK** button again.

A confirmation message is displayed when the print head has moved into the maintenance position.

5. Perform your maintenance task as necessary.

Note: After 10 minutes, an alarm sounds to warn you that the print head is still in the maintenance

position. Press the **OK** button to continue cleaning. The alarm sounds again at 10 minute intervals if the print head is not in the home position.

Note : Its important not to clean the 2 dual heads themselves as indicated in the blue areas to clean around the head, not the head itself.

* SC-S40600: Right print head only

Number	Area to clean	Frequency
1	Platen heater and media edge plates	Daily
2	Around the print head	Once a month or when you see a message on the LCD screen to perform head maintenance
3	Around caps	Once a month or as needed
4	Around flushing pad	Once a month or as needed

84